

4-in-1 Optical **Fiber Tester**

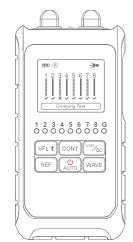

User Manual

NF-916&NF-916S

Product Introduction

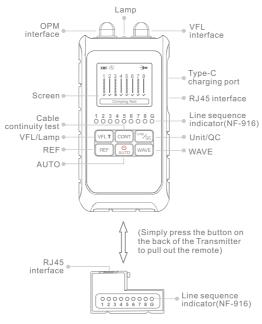

Transmitter + Remote

Product function instruction

1. AUTO

On/off: Long press " button to turn on or off.

Notice:

The automatic shutdown function is turned on by default (30 minutes) when it is turned on, and the icon " (A) " is

press the " [button again to turn off/on the automatic shutdown function.

2. Optical function

OPM mode is turned on by default once the device turns on. The real-time detected optical power intensity is displayed at the bottom of the screen. When the light intensity is too weak and exceeds the test range, "LoLo" will be displayed.

Supports 850/980/1310/1490/1550/1625nm wavelength. Insert the fiber cable into the OPM interface, switch to the corresponding wavelength by short pressing the " (WAVE) "



2.2 Unit switching

Long press " unity button to stitch the unit: dBm or mW/ uW/nW, the mW/uW/nW units can be automatically switched according to the current laser light intensity.

(A) 850nm 850nm LoLo LoLo dBm OPM Test OPM Test

nW

-ham

dB

OPM Test

2.3 REF

Short press the " REF unction. long press the " [REF] " button to enter when the unit is dBm.

OPM Test

(A) mm (A) 850nm 850nm REF -16, 64 -16.64 0.00 dBm

VER:V2

2.1 Optical power measurement

2.4 Frequency test

The device can work with 270Hz/1KHz/2KHz light source. Connect the light source with the OPM interface. And the frequency test results will be displayed in the upper right corner.



3. Continuity Test

NF-916

Plug one end of the network cable into the transmitter, the other end into the remote end, and short press " CONT " button to test; the test result will be showed through Line sequence indicator.


Two test modes for option, short press the " CONT " button again to switch between fast mode (0.5 seconds)/slow mode (1 second).



NF-916S

The operation is the same as NF-916.

But NF-916S test result can be directly showed on the screen. and it is more detailed, test results are as below.

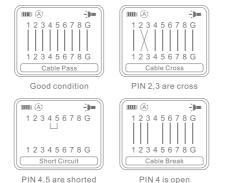

4. VFL

Plug the fiber cable into "VFL" interface, short press "VFL" " button to switch the mode to Steady on, slow flashing, fast flashing



5. QC function

In other modes, short press the " Unity " button to enter the QC (Test the quality of cable crystal head) function, and insert the cable into the RJ45 inferface to test.

A" ✓ " indicates that the pressure line is normal, and a " X " indicates that the pressure line is abnormal.



6. Lamp

Long press " (VFL)" " button to turn on/off the lamp. When turns on the lamp, it will show " > " on the upper right corner of the screen.

Product specification Model

Color
850/980/1310/1490/1550/1625nm (Wavelength)
Unit dBm or mW/uW/nW
REF
Frequnce 270Hz/1KHz/2KHz
\checkmark
Steady on/slow flashing/fast flashing
\checkmark
On/off
\checkmark
√
3.7 V lithium batery
128*61*32mm

NF-916/NF-916S

Accessories

Transmitter	1pc	User manual	1pc
Remote	1pc	Color box	1pc
Carry bag	1pc	USB Type-C cable	1pc
Lithium battery precautions card	1pc	Quality certificate	1pc

Remarks: The manual is only for reference. The product will be changed without prior notice. Goods in kind prevail.

NOYAFA ®	精明鼠。	深圳	市诺	方兵
-----------------	------	----	----	----

NOYAFA 精明鼠®						深圳市诺方舟电子有限公司						
编号	201	202	301	302	303	304	305	比例:	1:1	品号:	304-F3101-0001	
类目	塑胶件	五金类	镜片	PVC贴纸	不干胶贴	说明书	包装盒	单位:	mm	面写:		
选择						\checkmark		设计	CZG	品名:	NF-916&NF-916S说明书折页英文-V2 20240522	
306	307	308	309	310	311	312	313	核准		四位:	NF-910QNF-9103说明节折贝夹又-VZ 20240322	
彩卡	吸塑	工具包	PE袋	纸箱	宣传单	合格证	打印标签	标准:	√	文件类型:	你你 你你你你不 我 你	
								定制:		文件关至:	做货文件(较打样文件,更新参数)	
制作	日期	2024.05	.22	样式	4折页	4折页		印刷材质		128g双铜纸		
印刷要求		单色		页码	3		変更记录 -		V2较V1片	反本,合并了9	16和916S	
尺寸大小		320*115	mm	版本	V2	· · · · · · · · · · · · · · · · · · ·		文史心环				